


When you turn your ASUS Phone on for the first time, Setup Wizard will guide you through the setup process. Follow the onscreen instructions to select your language, select input methods, set up your mobile network and Wi-Fi, sync accounts, and configure your location services. Use your Google or ASUS account to set up your device, if you do not have a Google or ASUS account yet, go ahead and create one.


- 1.** On the Home screen, tap **All Apps** ① and then tap **Settings** ②.



- 2.** Tap **More** ③ and then **Cellular networks** ④.

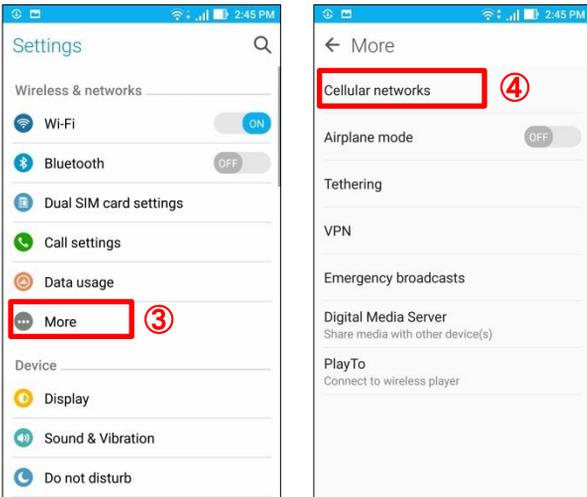


- 3.** Tap **SIM 2** ⑤ and then tap **Access Point Names** ⑥.

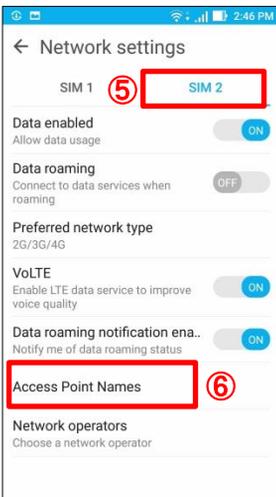

* Use SIM 2 if you applied for a nano SIM, use SIM 1 if you applied for a micro SIM.

- 4.** On the APN screen, tap the upper-right **[+]** to add a APN.

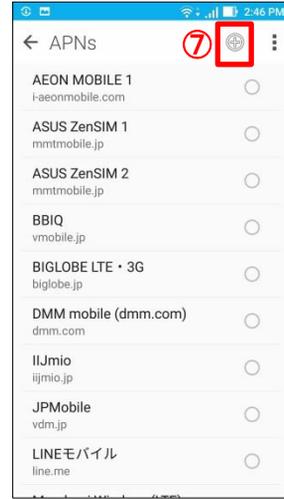

- 5.** On the Edit access point screen, enter the required settings and then tap **Save** ⑧.

Name	Your choice E.g. ASAHI NET
APN	lte.mobac.net
Username	d@w.asahinet.jp
Password	0000 (four zeros)
Authentication type	PAP or CHAP

There is no need to enter other settings. To use a fixed IP address, refer to the enclosed LTE settings guide.

- 6.** Select the name of the APN you have created ⑨. The settings are complete.

